



Classpad Help Series sponsored by Casio Education Australia		www.casioed.net.au	
001	Setting Up 1	Author	Mahendra Vaswani
		Date	1 Jan 2008
		CPM OS	03.01.3000.0240

On the back of the ClassPad,
use a pen or stylus to press the **P** button.

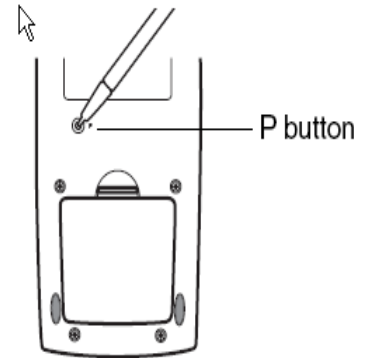


Touch the centre of each cross as directed.

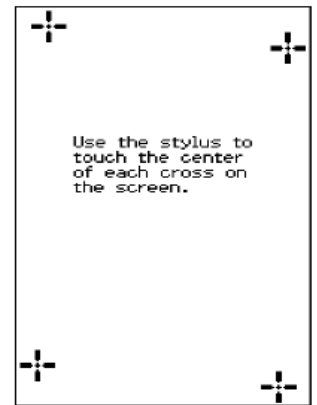


Adjust the screen contrast, tap **Set**.




Set the language you desire, tap **Set**.

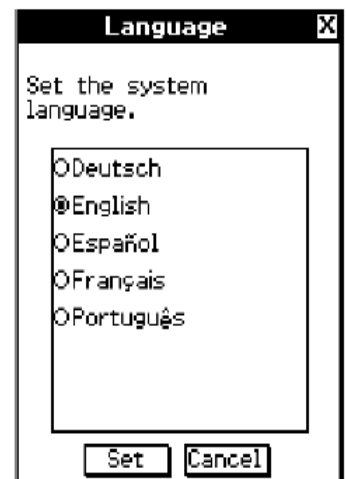

Select **QWERTY** as the keyboard format, tap **Set**.

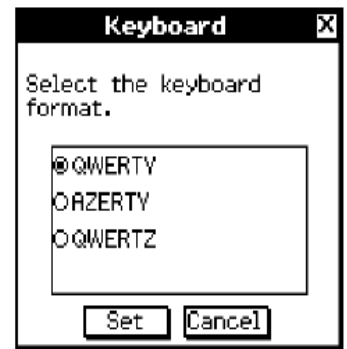


Select the preferred font, tap **Set**.

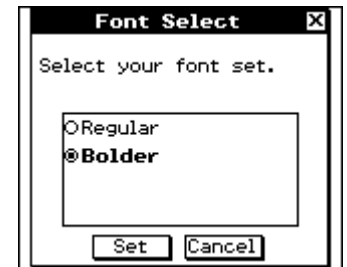

Set the **Power Save Mode** to 1 hour.

Set **Auto Power Off** to 6 min

Tap **Set**.

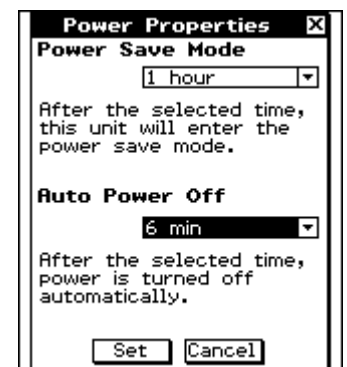


Tap

Tap **Edit**

Tap **Clear All Variables**

Tap **OK**

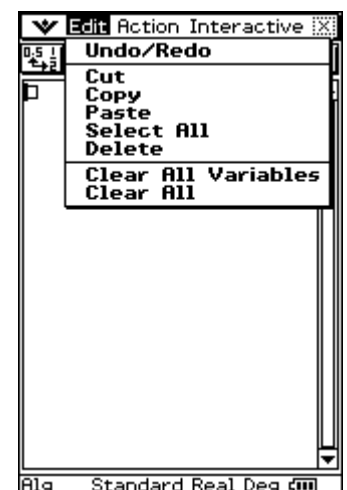

Note that this use of the 'P' button does not delete or alter any existing data, programs, add-ins or other work stored in your ClassPad.