

ClassPad II Help Series		Casio Education Australia - supporting Australian teachers	www.casio.edu.shiro.com.au	Author	Charlie Watson	
CP981	Ending Screens				Date	April 2015
					CPII OS	02.00.2000.0000

What is an Ending Screen? It's the picture that is briefly displayed on the screen when your ClassPad is turned off.

The default image is shown below.



Creating a picture to use as an ending screen is explained in another Help Series article.

This article explains how to set an existing picture, such as that below, on your hand held as the ending screen.

A selection of pictures can also be downloaded from www.charliewatson.com/classpad.

Open the **System** application, tap **System, Ending Screen**.

Choose the Select Picture File... option.

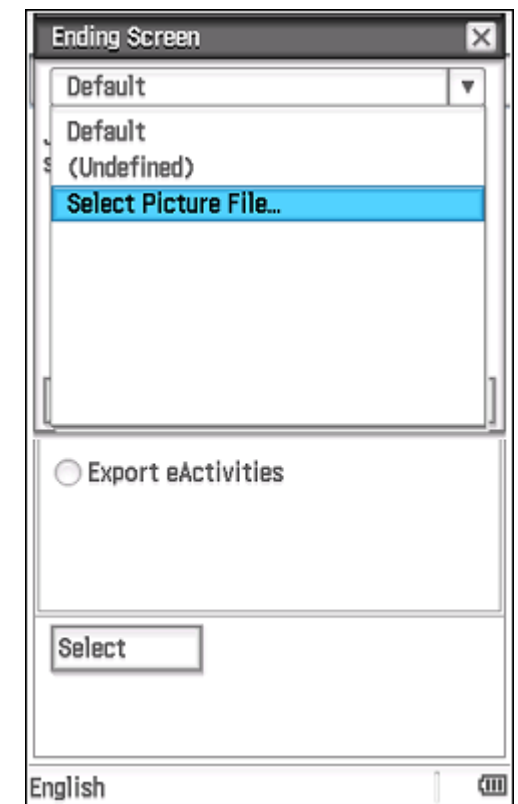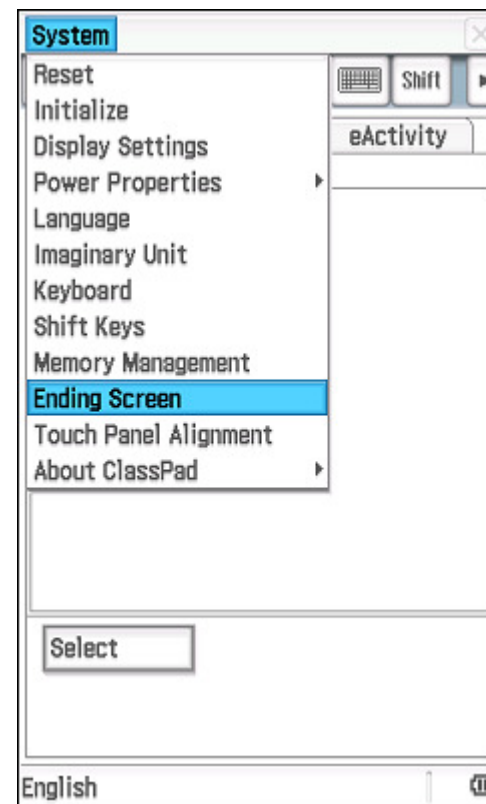

Navigate to the folder containing the desired picture, select the picture and tap Open.

You can tap **View** to preview the picture.

Tap Set to confirm your choice.

Turn your ClassPad off.

Your picture is briefly displayed, together with the ClassPad Name.

